


Heater/Air Conditioning Control Panel – Remove and Install (34 300 0)

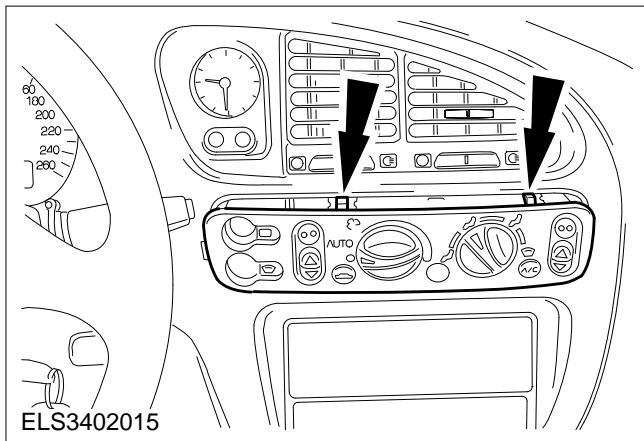

Remove

1. Remove the heater/air conditioning control unit.

- Unclip the control unit from the instrument cluster bezel.
- Disconnect the multiplug.

Install

2. Install the components in the reverse order.

3. Programme the control unit according to the Vehicle System Test Manual for Electrical Systems.