

Air Conditioning Accumulator/Dehydrator – Remove and Install (34 630 0)

Workshop Equipment

Servicing unit	
----------------	--

Materials

O-rings (green)	
-----------------	--

Remove

NOTE: “Safety Regulations” and “General Requirements and Safety Precautions for Servicing and Repairs” at the beginning of this section.

1. Standard preparatory measures:


- Make a note of the radio keycode.
- Make a note of the programmed radio stations.
- Lay protective covers on the fenders.

⚠ CAUTION: Disconnect the battery negative lead.

2. Drain the air conditioning as described in Op. no. 34 620 0.


3. Detach the left-hand headlamp cover.


4. Remove the condenser as described in Op. no. 34 632 0.

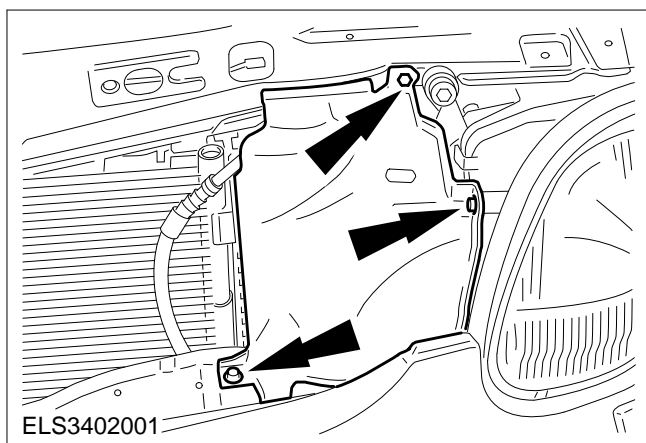

5. Remove the dehydrator.


- 1 Disconnect the refrigerant lines.
Remove the O-rings.
- 2 Disconnect the high-pressure switch multiplug.
- 3 Unscrew the high-pressure switch.

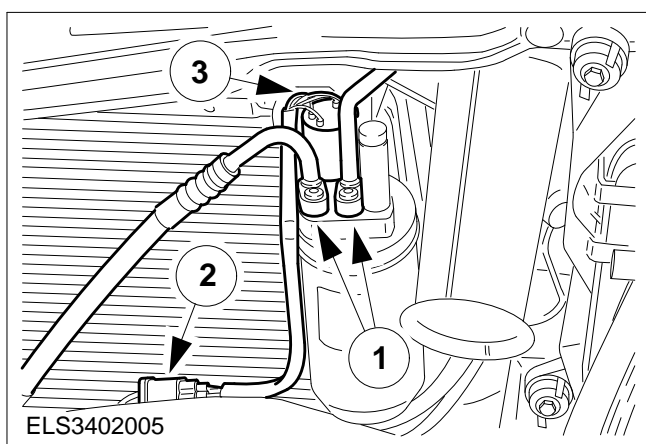

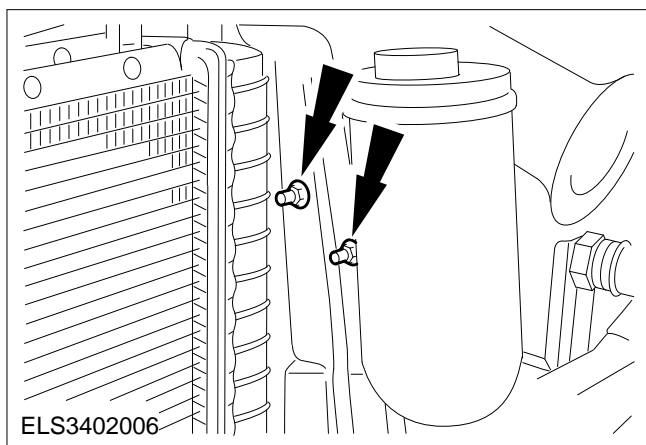**6. Remove the dehydrator (continued).****Install**

NOTE: Renew all O-rings when installing the components.

NOTE: Torques

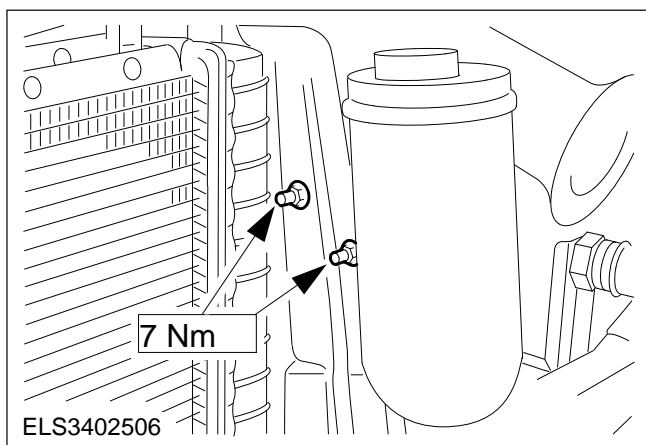7. Refit the components in the reverse order.**8. Install the air conditioning system accumulator/dehydrator.**

9. Standard finishing operations:

- Connect the battery negative lead.
- Remove the protective covers.
- Enter the radio keycode.
- Reprogramme the preset radio stations.
- Reset the clock.
- Road test the vehicle to collect data for the PCM.

10. Evacuate and fill the air conditioning as described in Op. no. 34 620 0.