



Refrigerant Lines – Disconnect and Connect (Air Conditioning Drained)

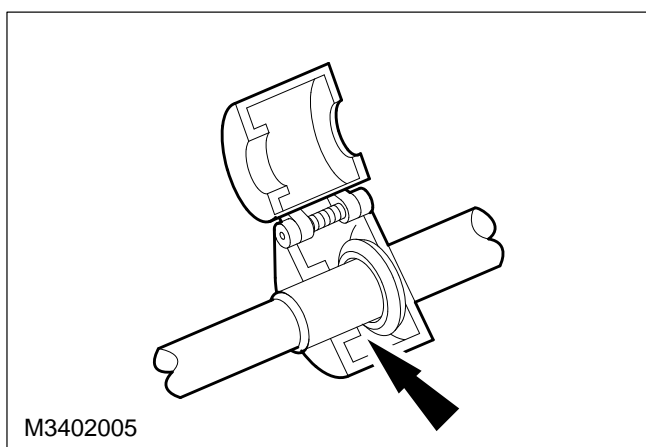

Disconnect the line


1. Apply the special tool.

Apply the special tool so that the inner collar can be guided into the clamping spring.

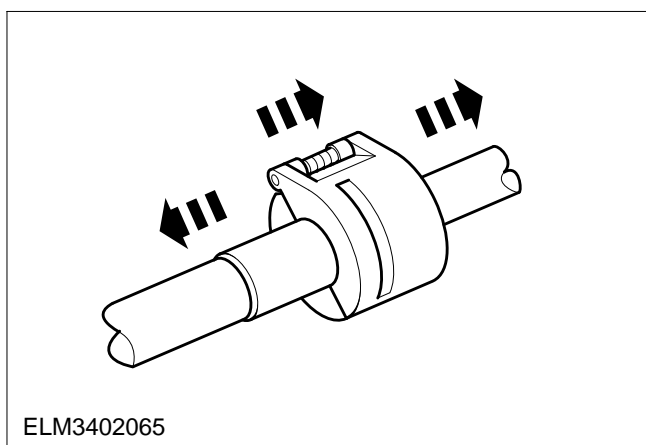

2. Disconnect the line

- Press the tool into the clamping spring.
- Separate the line.
- Open the tool and remove it.

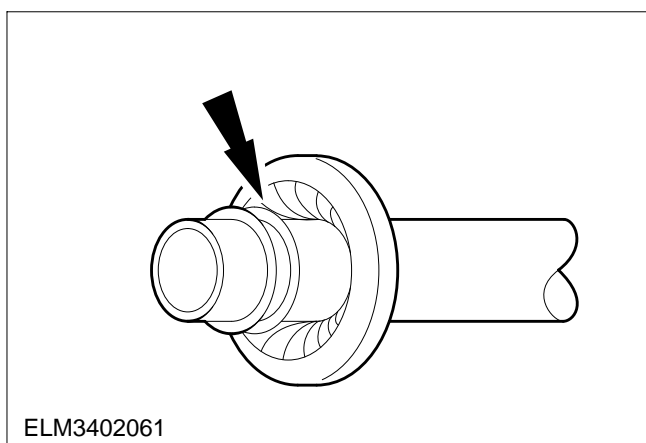


Connect the line

NOTE: Lint-free gloves must be worn to avoid contaminating the O-rings (see also Safety Regulations).

3. Check the clamping spring for damage.

If damaged, carefully remove the clamping spring with a thin length of wire and renew it.

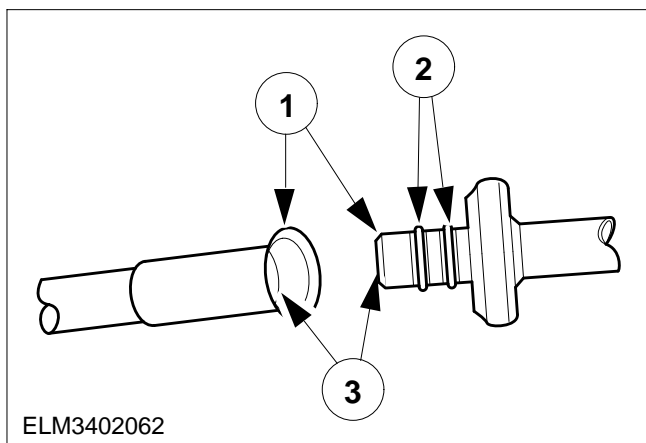


4. Prepare the connections.

- 1 Clean the connections using refrigerant oil and a lint-free cloth.

NOTE: Renew the O-rings.

⚠ CAUTION: Never lubricate the connections or O-rings with mineral oil.

- 2 Lubricate the connections and the O-rings with refrigerant oil.

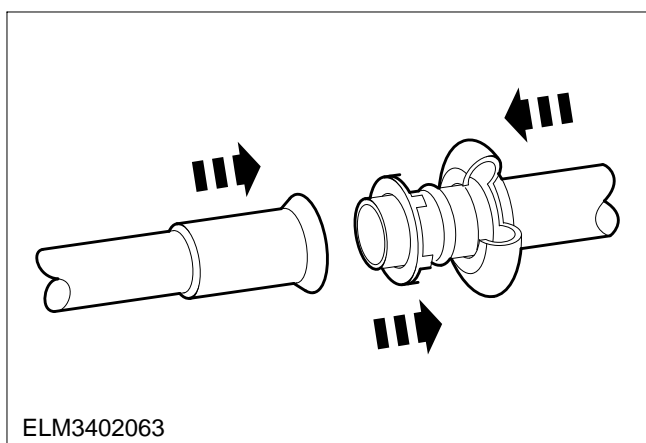

5. Connect the line sections.

- Press the expanding ring into the clamping spring and connect the line.
- Check that the clamping spring has engaged, i.e. that the expanding ring has jumped out. Pull to test.