



Expansion Tank – Remove and Install (24 284 0)

Remove

1. Drain the cooling system (refer to Operation Number 24 122 0).
2. Detach the three hoses.

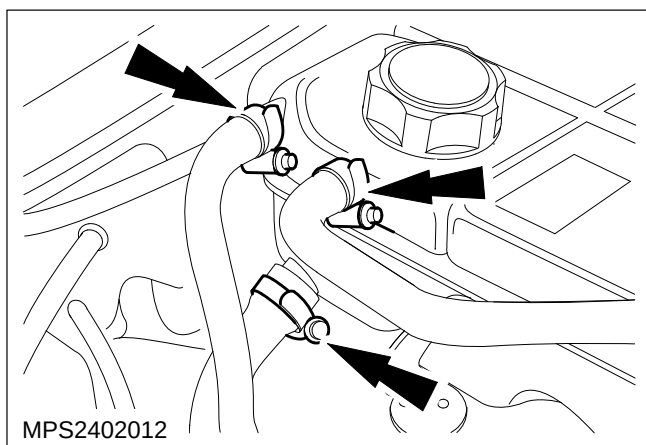

3. Remove the expansion tank.

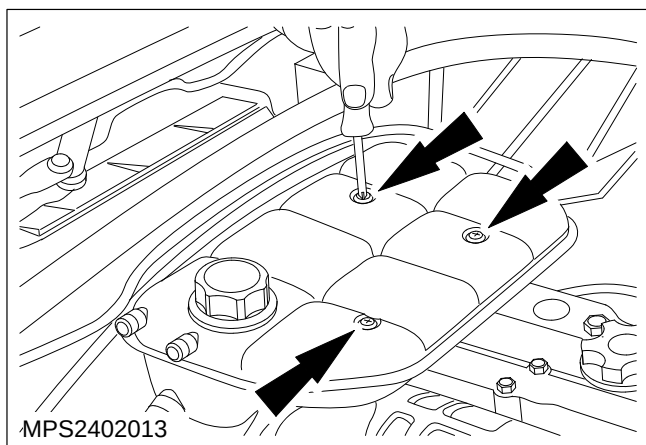

Replace

4. Refit the components in reverse order.
5. Refill the system and check for leaks (refer to Operation Number 24 122 0).

