
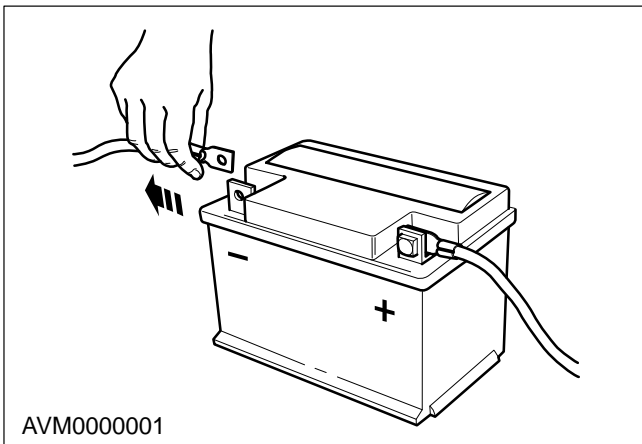


Switch – Door Ajar (Front Door) – Remove and Install (33 507 0)**Remove**

- 1. Disconnect the battery negative lead.**
- 2. Remove the front door trim panel (refer to Operation Number 43 705 0).**

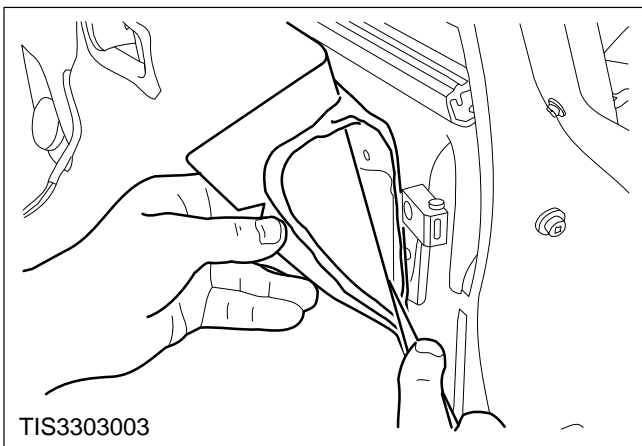


⚠ CAUTION: Avoid touching the adhesive surface as rebonding will be impaired.

- 3. Locally detach and fold back foam watershield.**


Using a plastic knife (disposable cutlery), cut through the butyl strip to enable the foam watershield to be folded back for access. Do not attempt to pull the foam watershield from the door without cutting the butyl strip.

- 4. Detach the door lock ajar switch (refer to Door Lock Removal Operation Number 41 351 0).**

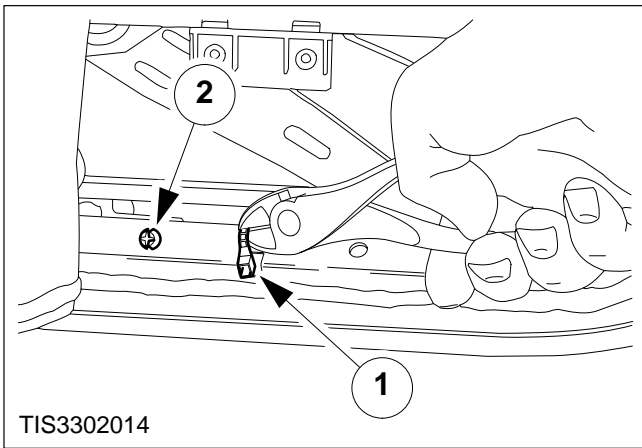

5. Detach the multiplug.

- 1 Cut the retaining strap on the door frame.
- 2 Knock out the multiplug.

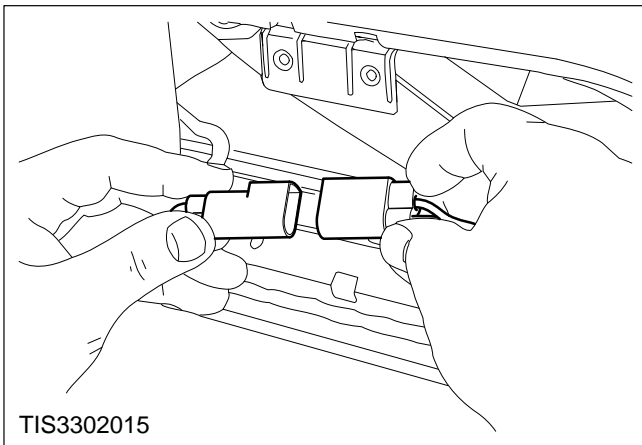

6. Disconnect the multiplug.

Install

NOTE: In the event of a foam watershield being unfit for further use, it must be renewed.

7. Refit the components in reverse order.