
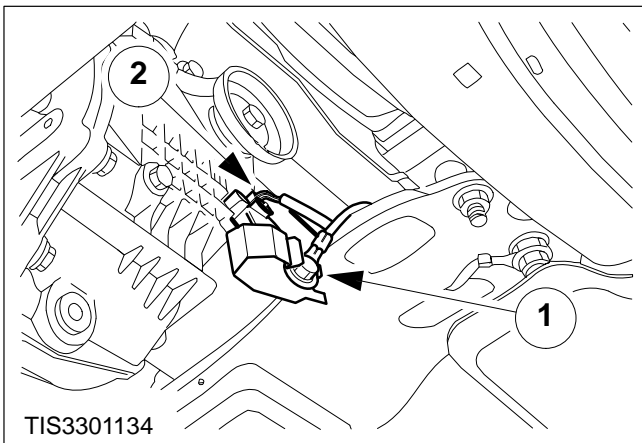


Speed Sender Unit – Remove and Install (33 654 0)

Remove

CAUTION: Disconnect the battery negative lead.

1. **Raise the vehicle.**
2. **Place a drain tray under the sender unit to collect any escaping transmission fluid.**
3. **Disconnect the multiplug.**

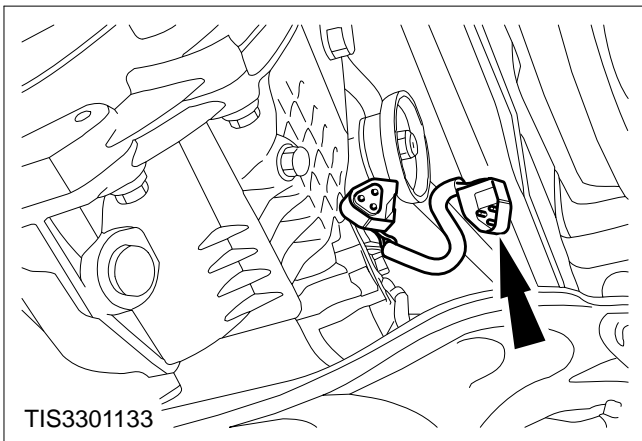

NOTE: When removing the sender unit watch out for escaping transmission fluid.

4. **Remove the sender unit.**
 - 1 Unscrew the ground lead bolt and remove the clip.
 - 2 Pull out the sender unit and remove.

Install

5. **Refit the components in reverse order.**
Top up the transmission fluid if necessary.