## Motor - Window Operating - Front Door - Remove and Install (33 782 0)

For the removal and installation procedure of the front door window operating motor refer to Operation Number 42 338 0.