


## Heater – Diesel Fuel – Remove And Install (23 769 0)


### Remove

**⚠ CAUTION:** Disconnect the battery negative lead.


1. **Disconnect the diesel fuel heater multiplug.**

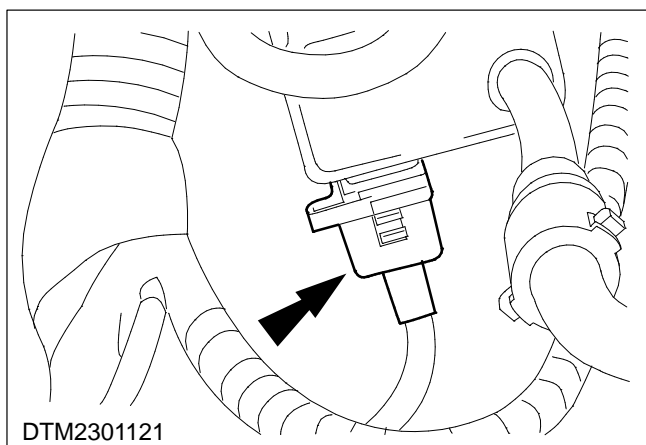


2. **Disconnect the inlet and outlet pipes.**

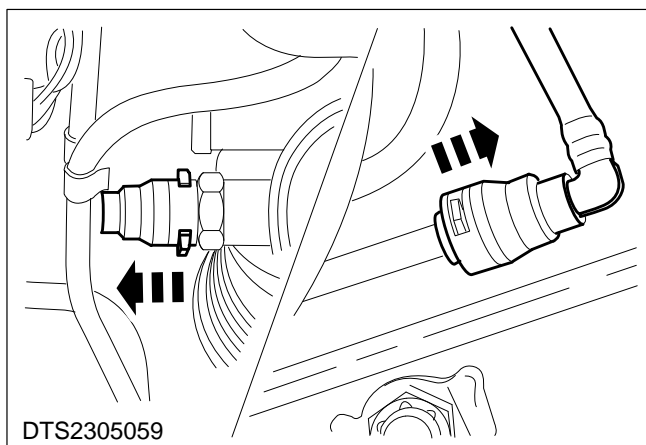

3. **Carefully prise out the fuel heater retaining pins.**

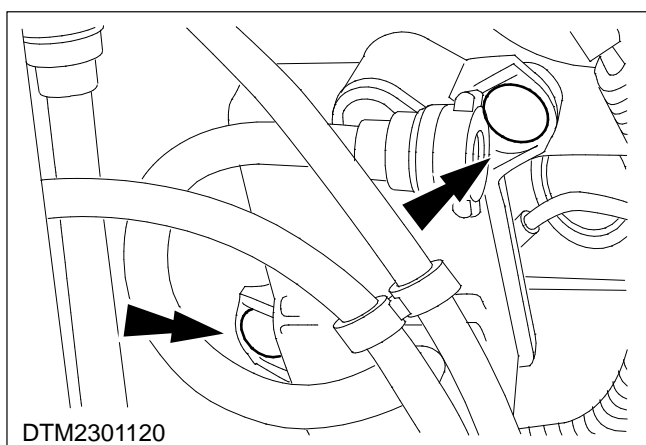

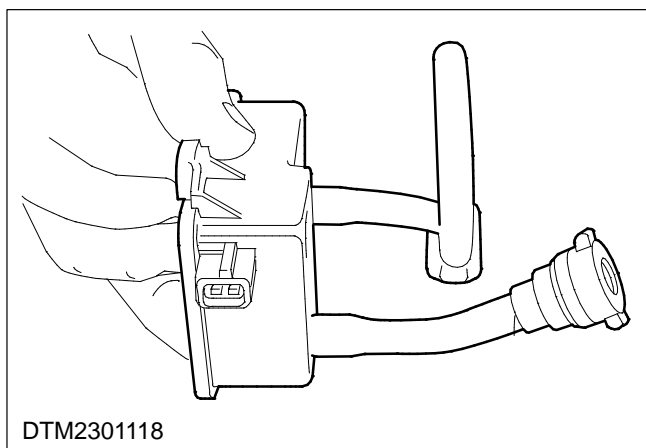

**4. Remove the diesel fuel heater.**

**Install**

**5. Refit the components in the reverse order.**