



Roll Over Valve – Remove and Install (23 576 0)

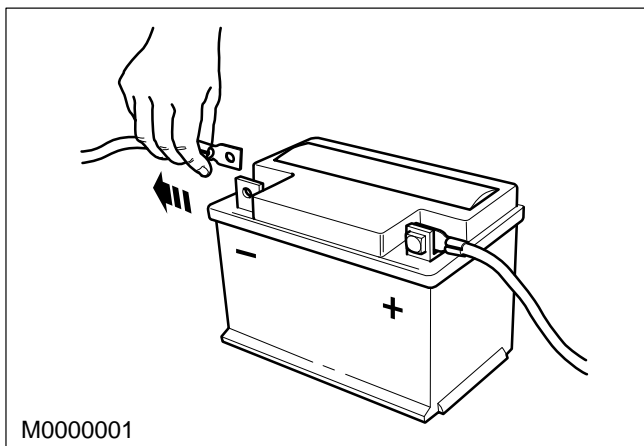


Remove


1. Disconnect the battery earth lead.
2. Remove the fuel tank filler pipe (refer to Operation No. 23 572 0).

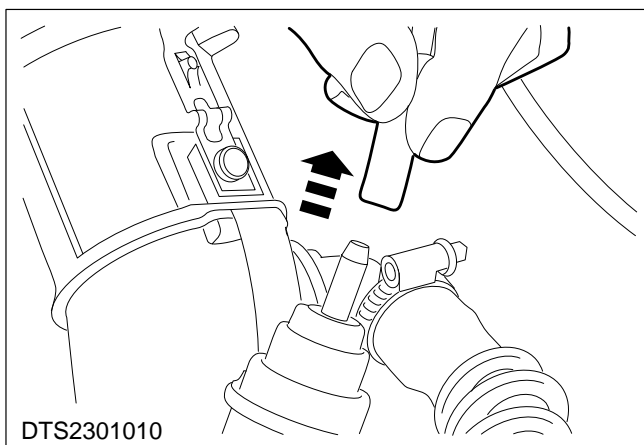

3. Disconnect the roll over valve vent hose.

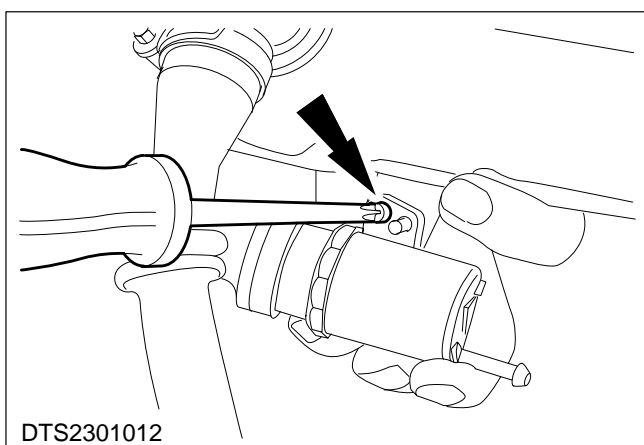

4. Unscrew the roll over valve retaining screw.

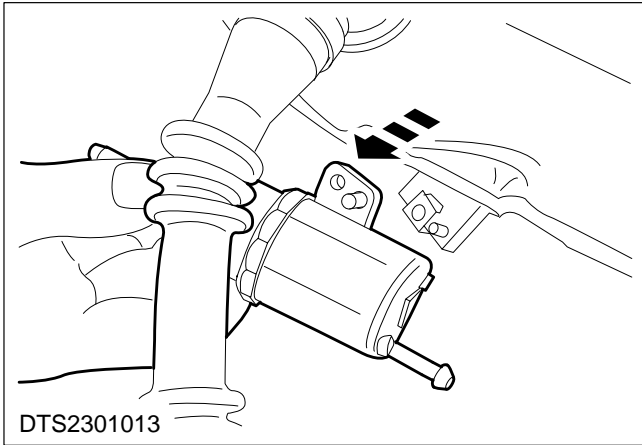

5. Remove the roll over valve.

Install

6. Refit the components in reverse order.