


Hydraulic Clutch Operating System – Bleed (16 843 0)

Materials


Brake fluid (Super Dot 4)	ESD-M6C57-A
------------------------------	-------------

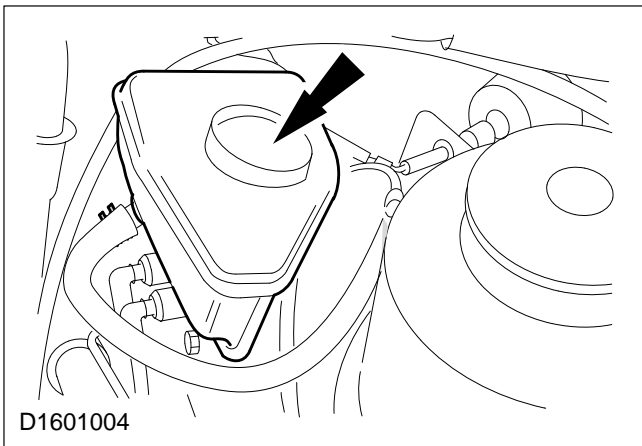

⚠ CAUTION: Observe the safety precautions for handling brake fluid. Do not reuse used brake fluid.

1. Fill the reservoir.

Raise the vehicle.

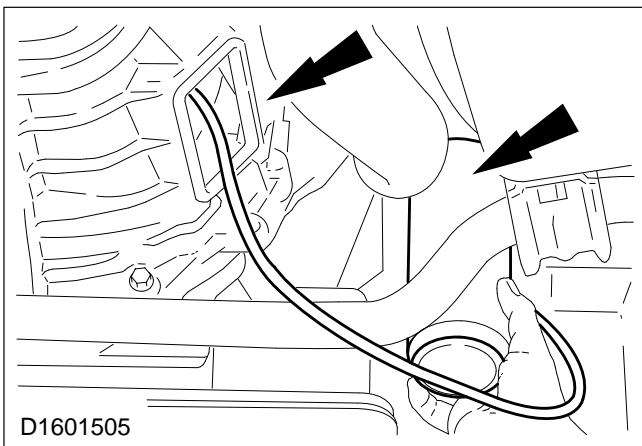

NOTE: After bleeding, depress the clutch pedal ten times and check the operation of the system.

2. Bleed the clutch system.

- Remove the gaiter.
- Connect a proprietary bleed bottle to the bleed screw. Locate the bleed bottle at least 20 cm above the bleed screw.
- Open the bleed screw one turn and depress the clutch pedal repeatedly until bubble-free fluid escapes, making sure at all times that the level of fluid in the reservoir is sufficient (5 mm above the “max” mark).
- Tighten the bleed screw to 14 Nm, refit the gaiter.
- Fill the reservoir up to the “max” mark.