


### 5. Remove the lower arm.

- 1 Remove the lower arm securing bracket.
- 2 Remove the lower arm pivot bolt.

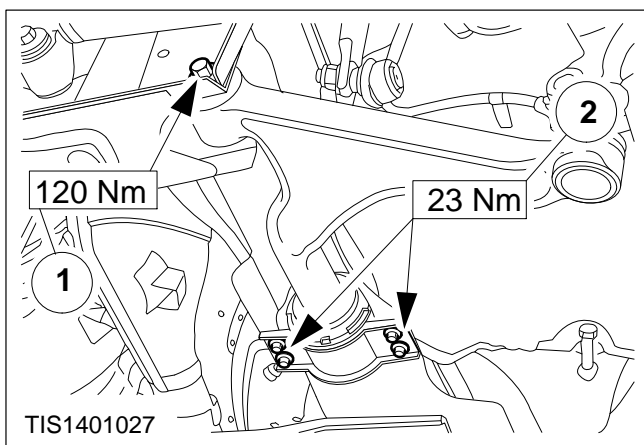


### Install

**NOTE:** The lower arm retaining bolts should be tightened with the weight of the vehicle on its wheels.


### 6. Refit the lower arm.

- 1 Refit the lower arm pivot bolt.
- 2 Refit the lower arm securing bracket.

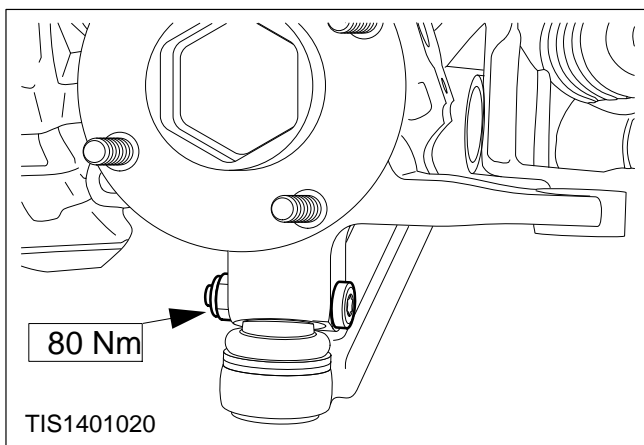

### 7. Refit the lower arm ball joint to the spindle carrier.

### 8. Refit the engine lower cover.

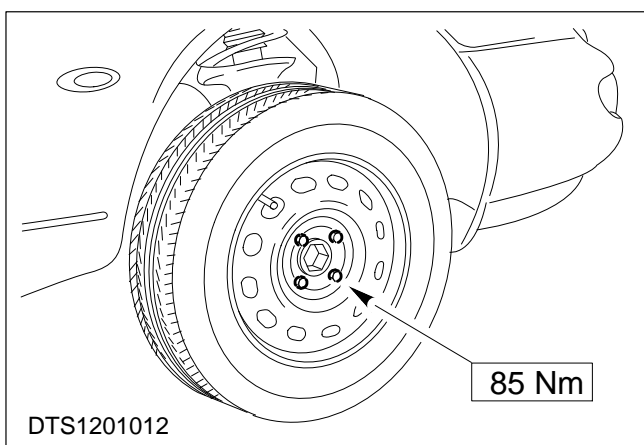

### 9. Refit the front wheel and lower the vehicle.

### 10. Check the front wheel alignment as described in Operation Nos. 14 111 0 and 14 111 3.