

Disc - Front Brake - Remove and Install (One side) (12 223 0)

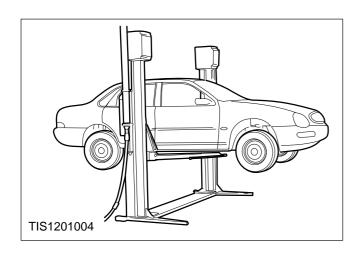


Remove


1. Slacken the wheel nuts, raise the vehicle and remove the front road wheel.

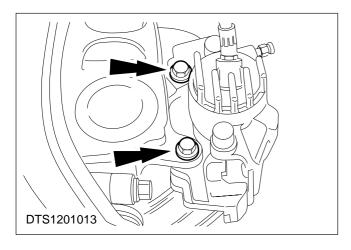

- 2. Remove the brake caliper assembly.
 - Suspend the caliper to prevent damage to the flexible brake hose.
- 3. Mark the relative position of the hub and disc.

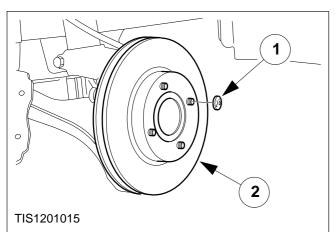


- 4. Remove the brake disc.
 - 1 Remove the spring washer.
- 2 Remove the brake disc.

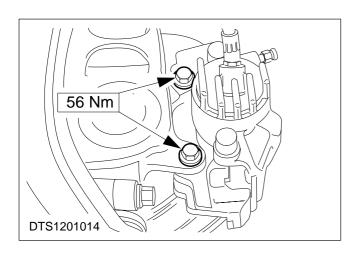


Install

NOTE: If the original disc is to be refitted ensure that the match marks are aligned.

 5. Refit the brake disc and secure with a new spring washer.



6. Refit the brake caliper assembly.

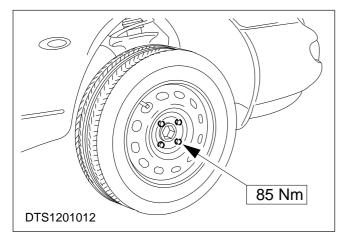

- 7. Refit the road wheels and lower the vehicle.
- 8. Apply the footbrake to adjust the brake pads.