
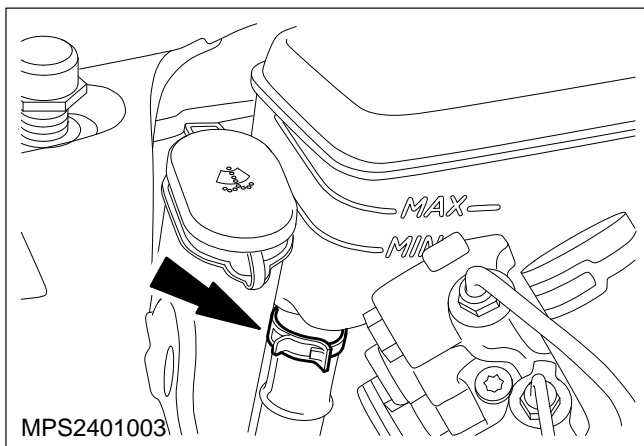


Expansion Tank – Remove and Install (24 284 0)**Remove**


- 1. Drain the coolant (refer to Operation Number 24 122 0)**
- 2. Disconnect the lower water hose.**

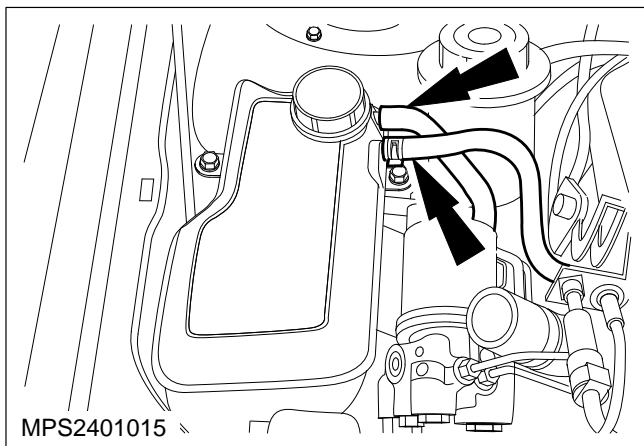


- 3. Disconnect the upper hose and pull off the overflow hose.**

**V6 engines only**


- 4. Disconnect two hoses and pull off the overflow hose.**

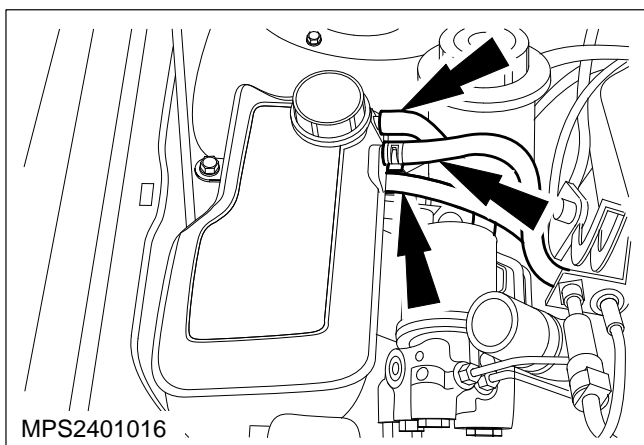

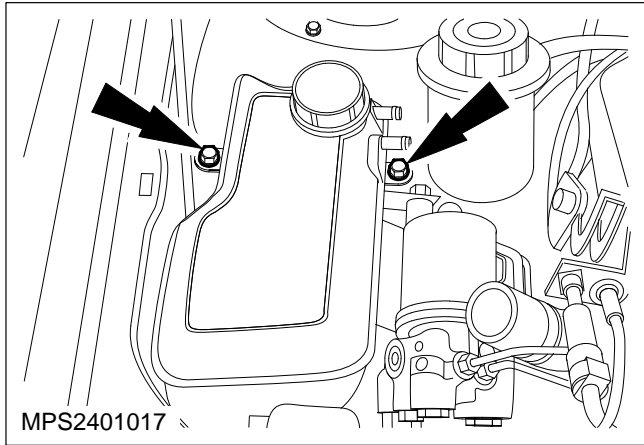


All vehicles

5. Remove the expansion tank.

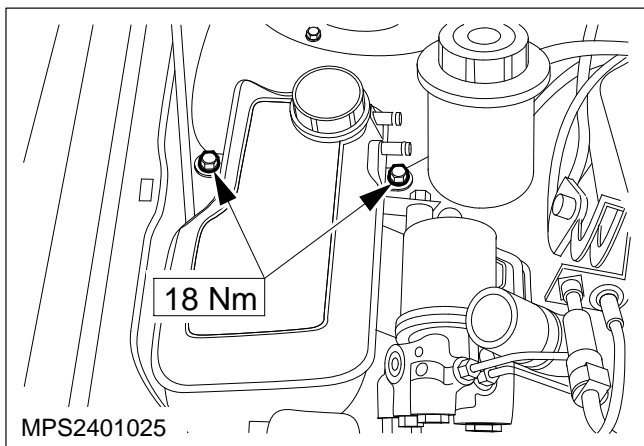

Install

6. Refit the components in reverse order.

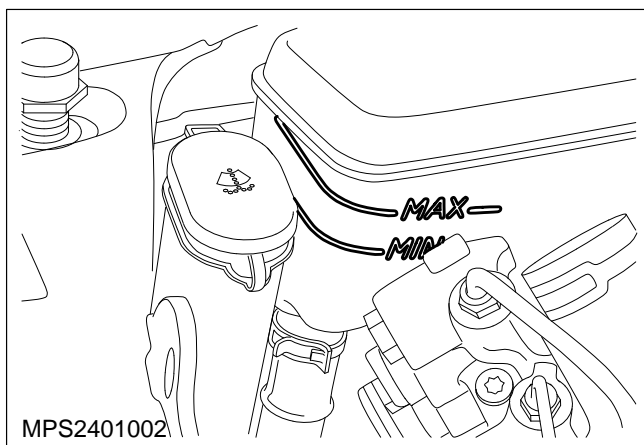

7. Refill the cooling system and check for leaks.