
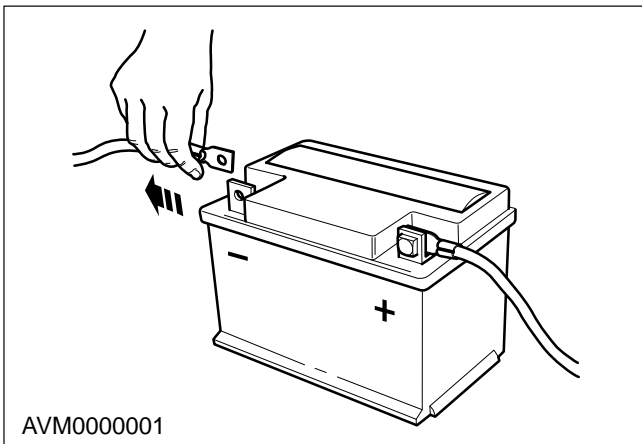


**Bulb – Auxiliary Warning Light – Remove and Install (33 143 0)****Remove**

1. Disconnect the battery negative lead.
2. Remove the instrument cluster (refer to Operation Number 33 214 0).

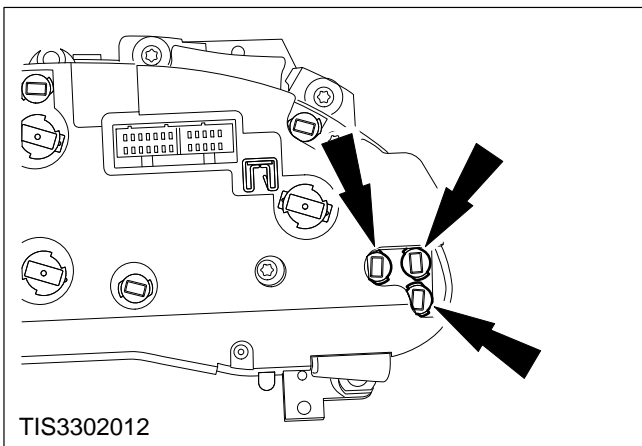

3. Remove the appropriate bulb.

**Install**

4. Refit the components in reverse order.