

Electronic Vacuum Regulator – Remove And Install (29 245 0)

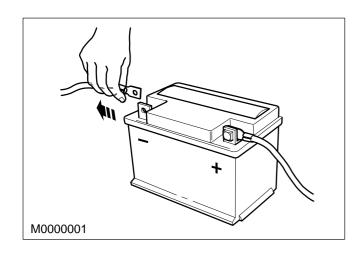


Remove

1. Disconnect the battery earth lead.

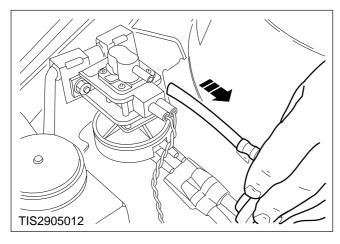


2. Disconnect the vacuum hoses.

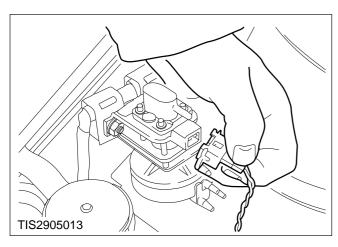


CAUTION: Do not pull on the wiring; pull on the multiplug body.

3. Disconnect the electronic vacuum regulator multiplug.

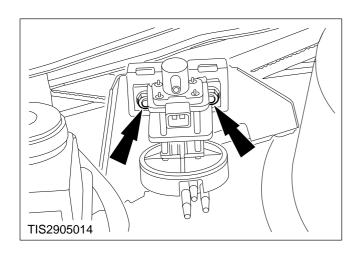

4. Unscrew the electronic vacuum regulator retaining bolts.

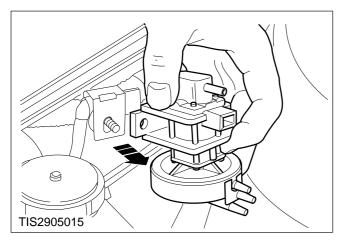

5. Remove the electronic vacuum regulator.

Install

6. Refit the components in reverse order.