


Charge Air Cooler – Remove And Install (23 620 0)


Remove

⚠ CAUTION: Disconnect the battery negative lead.

1. Remove the radiator (refer to Operation Number 24 254 0).
2. Remove the charge air cooler retaining bolt.

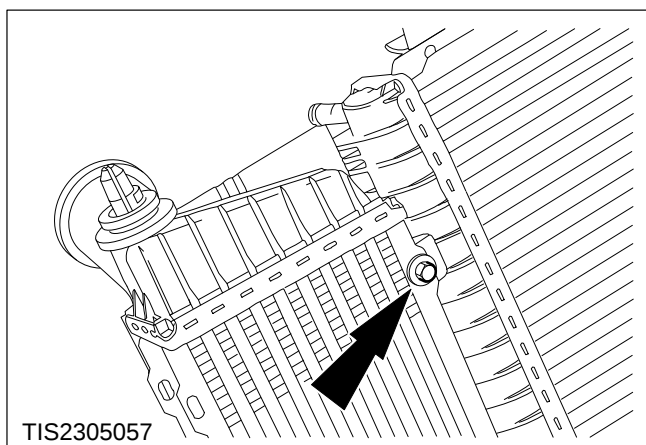

3. Remove the charge air cooler from the radiator.

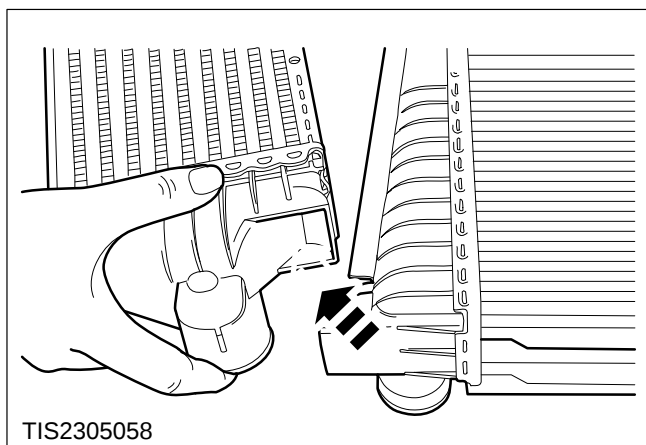

Install

4. Refit the components in the reverse order.