


Glow Plugs – Remove And Install (23 777 0)


Remove

⚠ CAUTION: Disconnect the battery negative lead.


1. Disconnect the engine coolant low level warning switch multiplug.

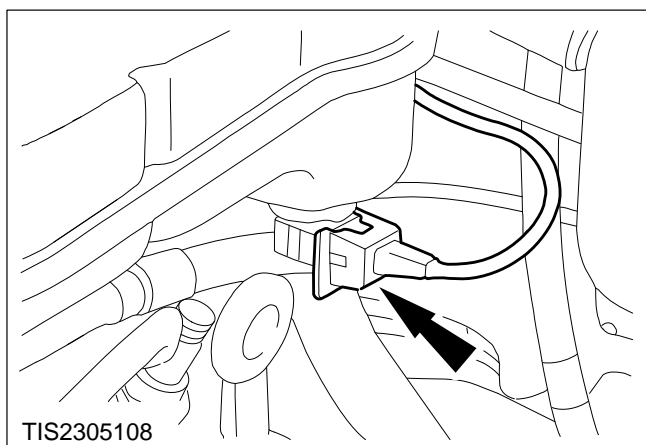


2. Remove the three expansion tank retaining screws.

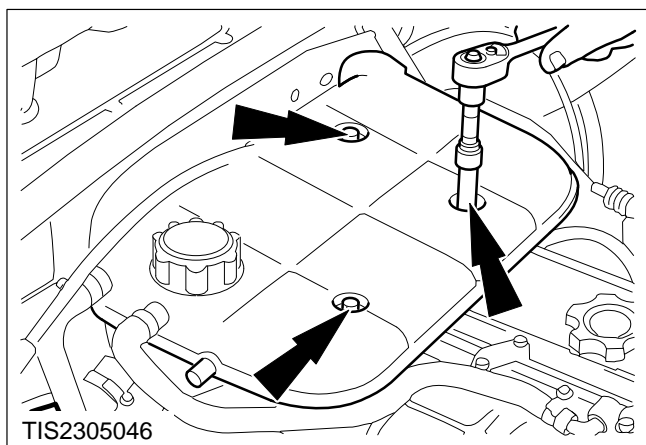


3. Position the expansion tank to one side.

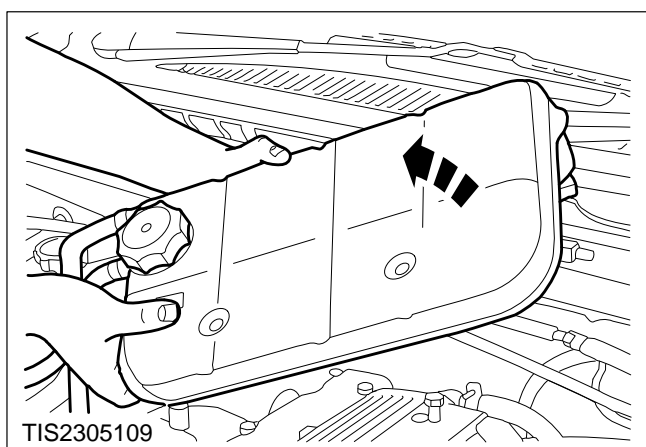

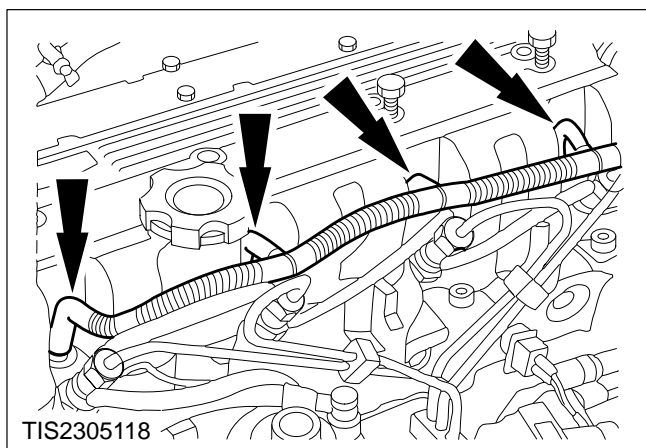

4. Disconnect the four glow plug multiplugs.

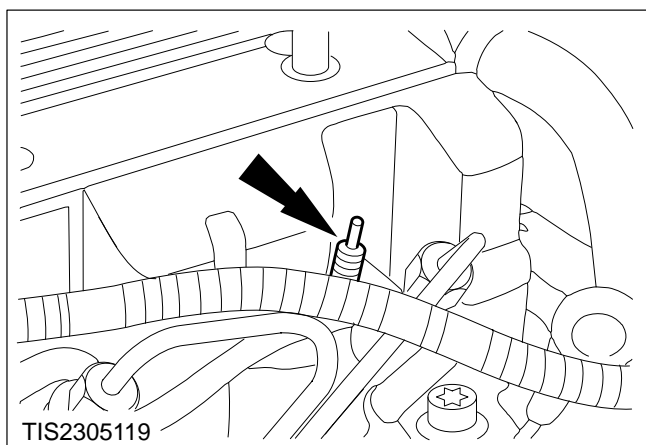

5. Remove the glow plugs.

Install

6. Refit the components in the reverse order.