

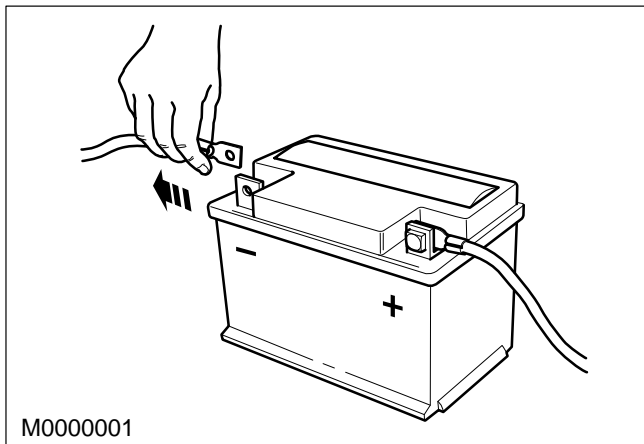


**Air Cleaner Assembly (DOHC Variants) – Remove and Install (23 174 0)****Remove**


1. **Disconnect the battery earth lead.**

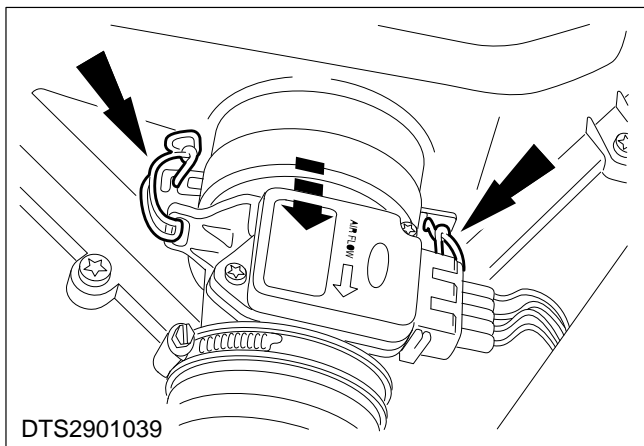


2. **Release the retaining clips and disconnect the MAF sensor from the air cleaner assembly.**

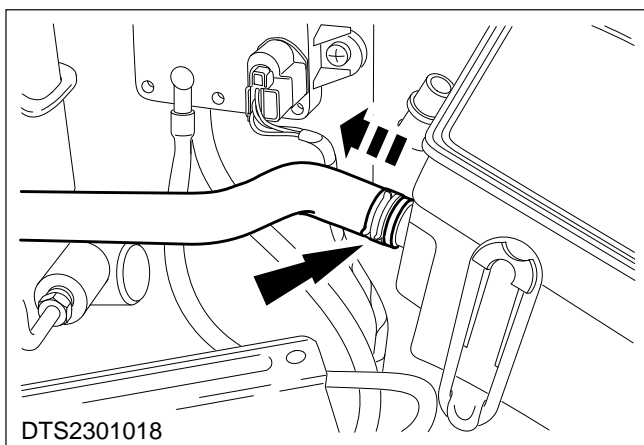


3. **Open the clip and disconnect the breather hose.**

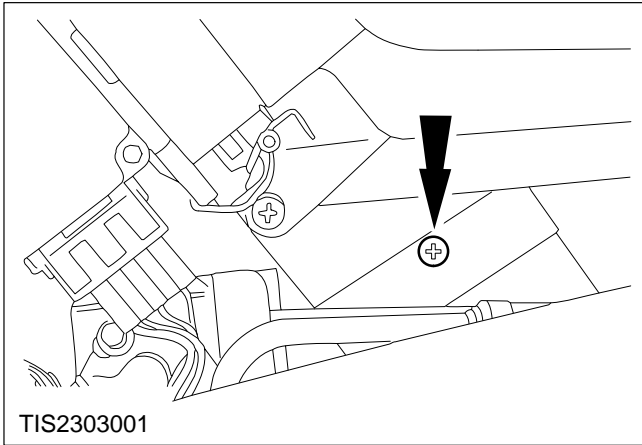

**4. Unscrew the intake pipe retaining screw.**

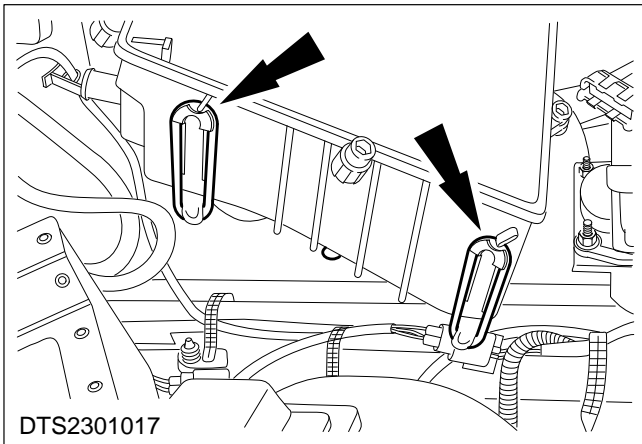

**5. Unclip the air cleaner assembly retaining bands.**

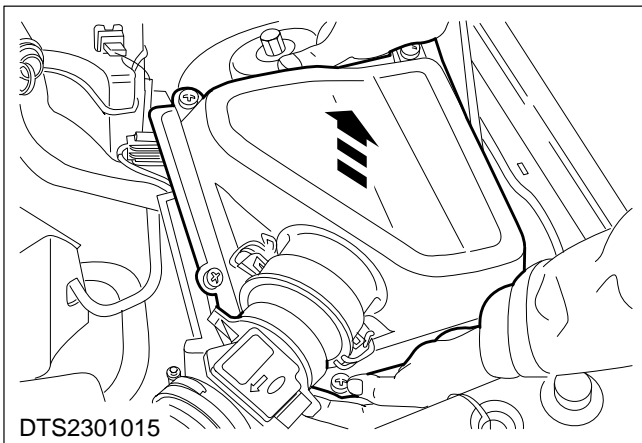

**6. Remove the air cleaner assembly.**

**Install**

**7. Refit the components in reverse order.**