



Air Cleaner Assembly (Diesel Variants up to 97¼ MY) – Remove and Install (23 174 0)

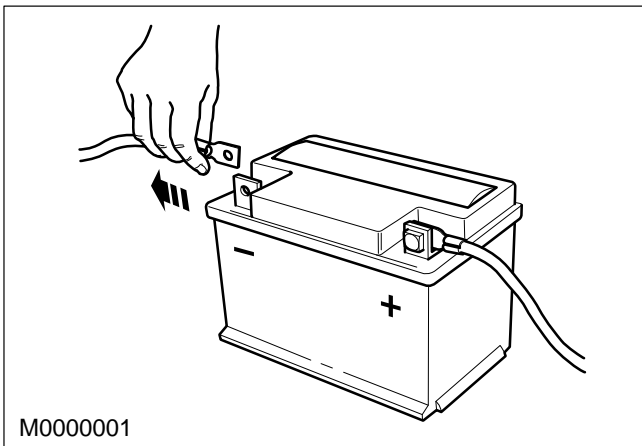


Remove


1. Disconnect the battery earth lead.

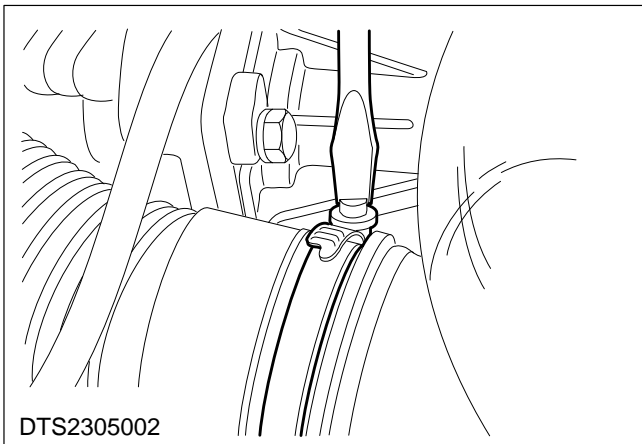


2. Slacken the clip and disconnect the turbocharger compressor intake hose.

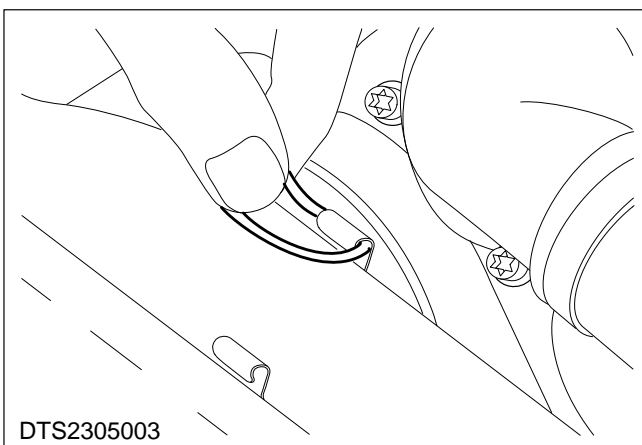


3. Unclip the intake pipe retaining band.

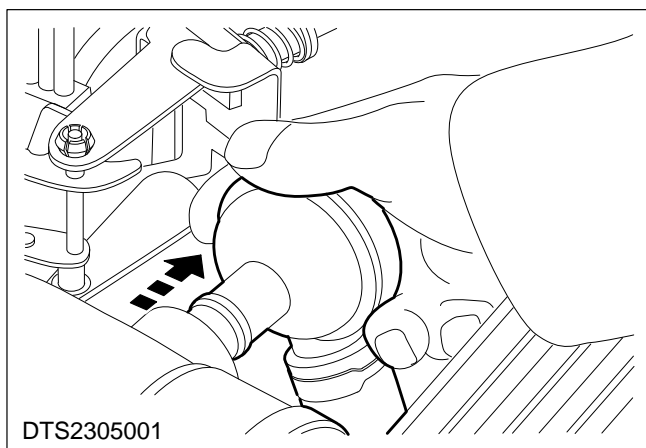


4. Disconnect the breather hose.

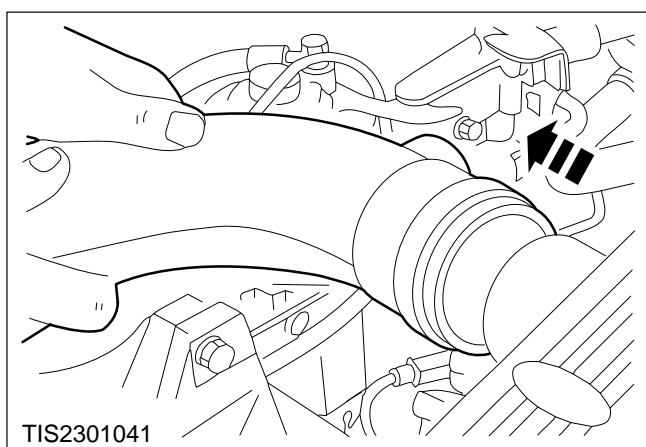


5. Disconnect the intake pipe from the air cleaner assembly.

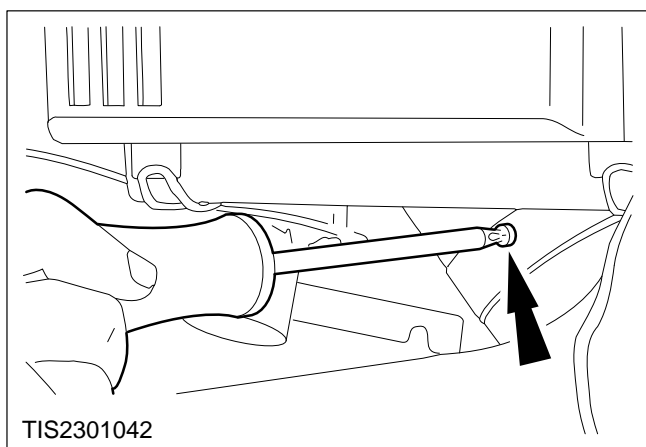


6. Unscrew the intake pipe retaining screw.

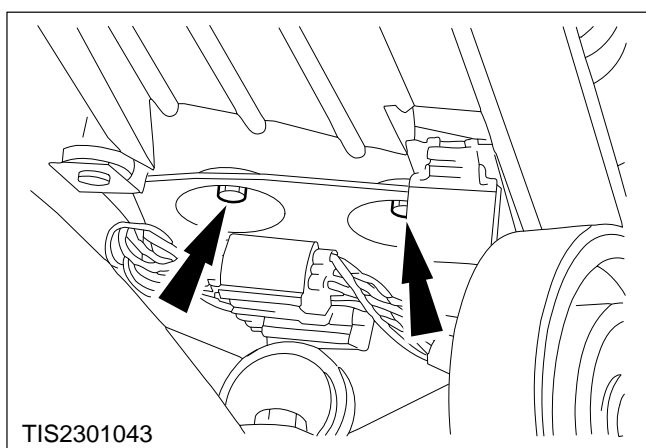

7. Unscrew the connector bracket retaining bolts.

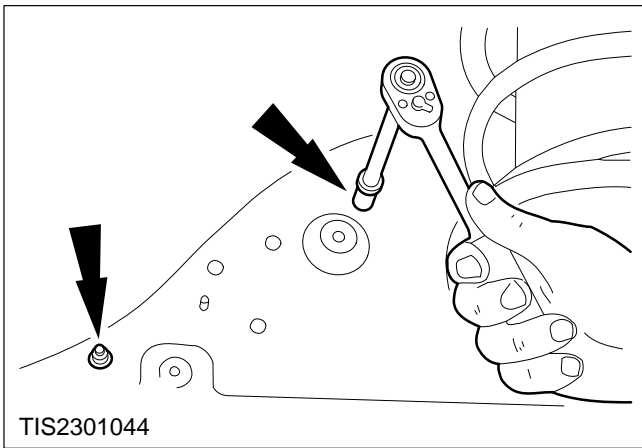

8. Unscrew the air cleaner assembly retaining bolts.

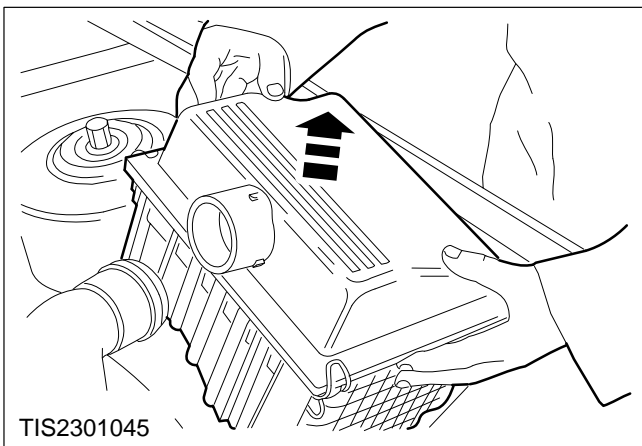

9. Remove the air cleaner assembly.

Install

10. Refit the components in reverse order.