
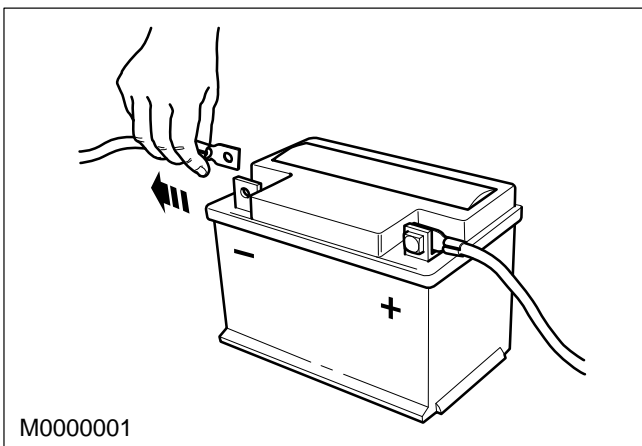


Element – Fuel Filter (Diesel Variants) – Replace (23 546 0)**Remove**

- 1. Disconnect the battery earth lead.**

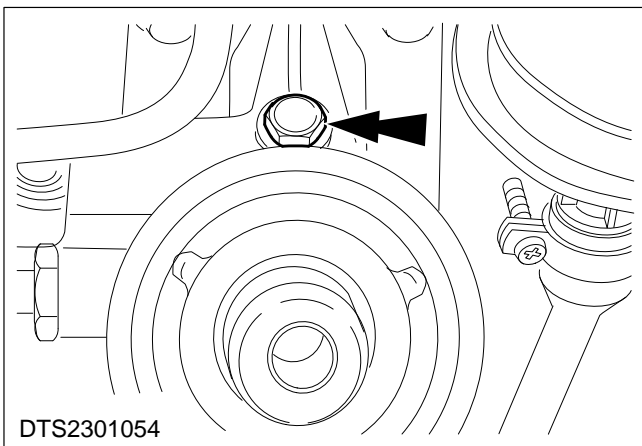

⚠ WARNING: Be prepared for some fuel spillage. Observe fuel handling precautions.

- 2. Unscrew the fuel filter element retaining bolt and remove the filter.**

Install

- 3. Refit the components in reverse order.**

- 1 Always use a new fuel filter element; do not attempt to clean the old one.
- 2 Fit new 'O' ring seals where appropriate.