



Fuel Filter (Petrol Variants) – Remove and Install (23 545 0)

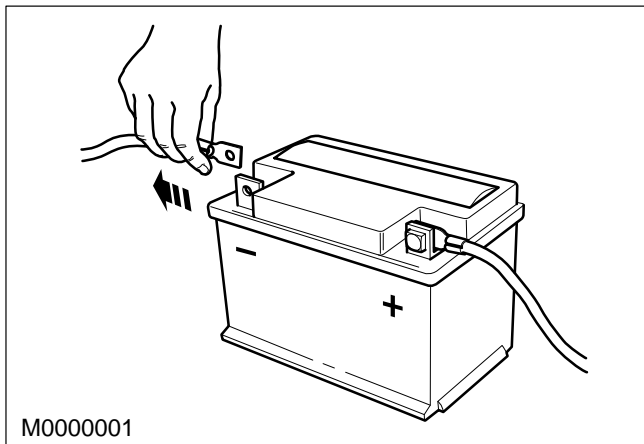


Remove


1. Disconnect the battery earth lead.

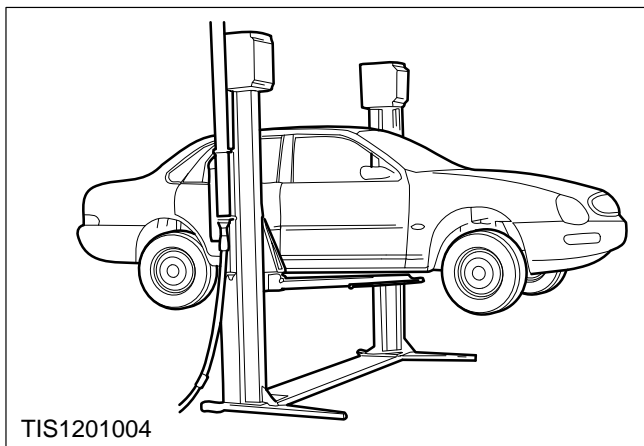

2. Raise the vehicle on a hoist.

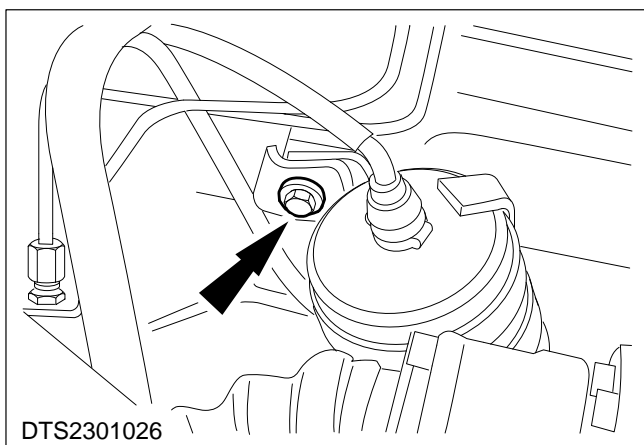


3. Unscrew the fuel filter bracket retaining bolt.

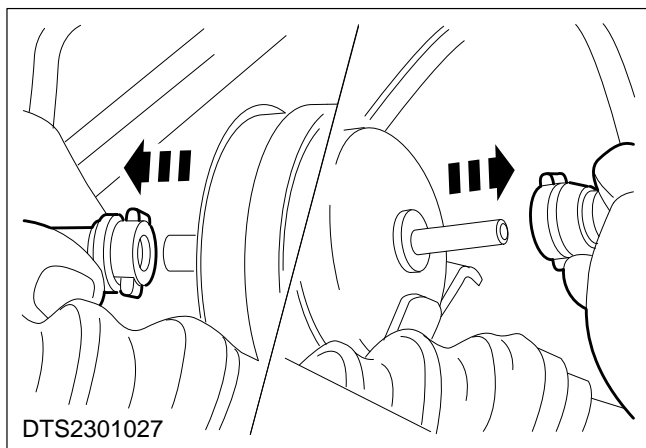


WARNING: Be prepared for some fuel spillage. Observe fuel handling precautions.

4. Disconnect the fuel pipes and remove the fuel filter and bracket assembly.

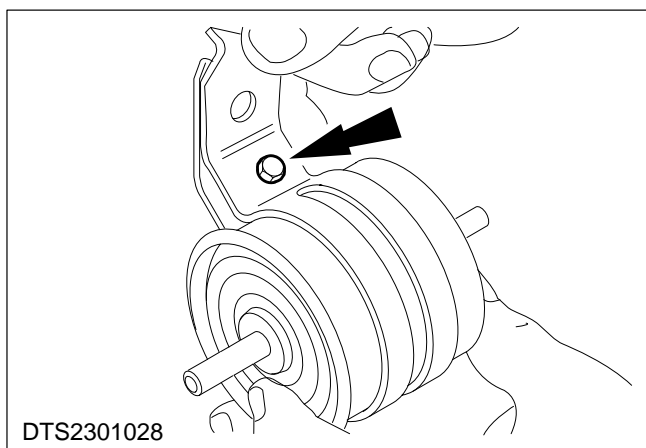

5. Unscrew the fuel filter clamp bolt.

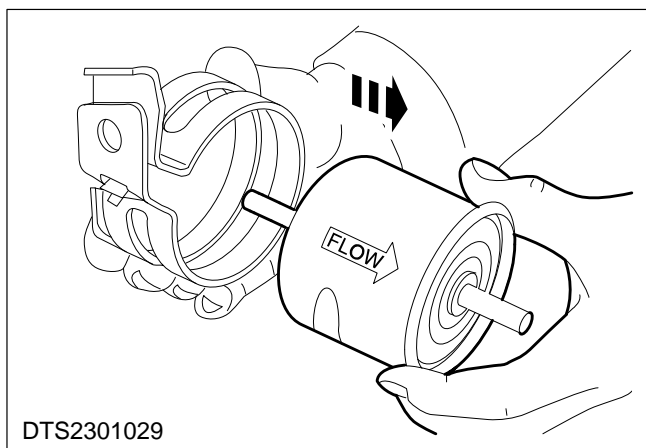

6. Remove the fuel filter.

Install

7. Refit the components in reverse order.