


Switch – Speed Control – Remove and Install (33 500 0)

Remove

⚠ CAUTION: Disconnect the battery negative lead.


1. Remove the upper steering column shroud (two screws) (steering wheel shown removed for clarity).

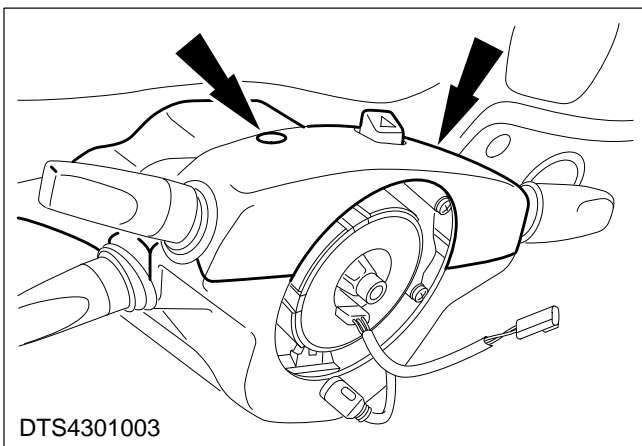

2. Remove the lower steering column shroud (three screws) (steering wheel shown removed for clarity).


⚠ WARNING: Before removing the air bag module take note of the WARNINGS given in the operation referred to.

3. Remove the air bag module (refer to Operation Number 40 700 0).

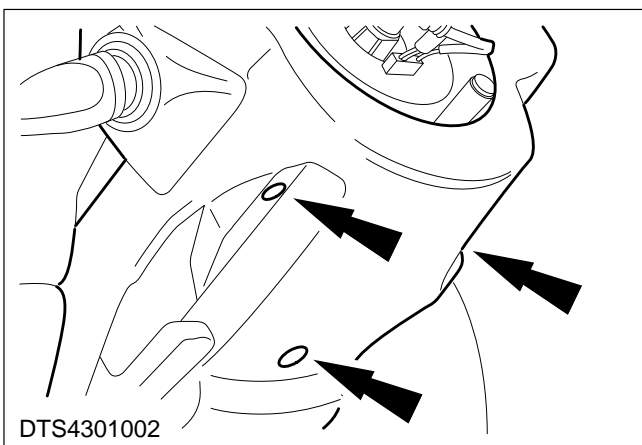

4. Remove the speed control switches.

- 1 Disconnect one multiplug.
- 2 Disconnect two wiring connectors.
- 3 Remove four screws.

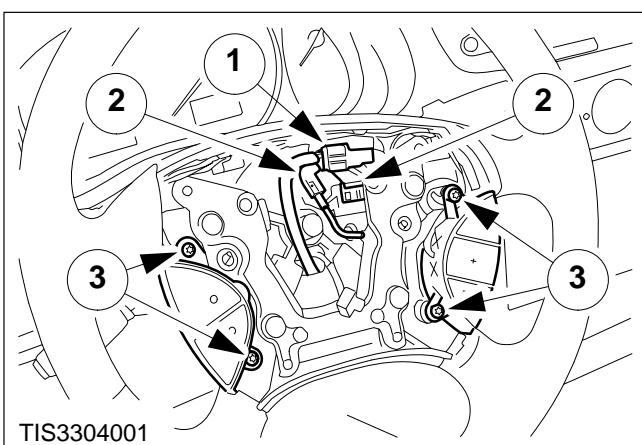

Install

- 5. Refit the components in reverse order.**