



## Sensor – Accelerator Pedal Position (Diesel '97½ MY Onwards) – Remove And Install (29 228 0)

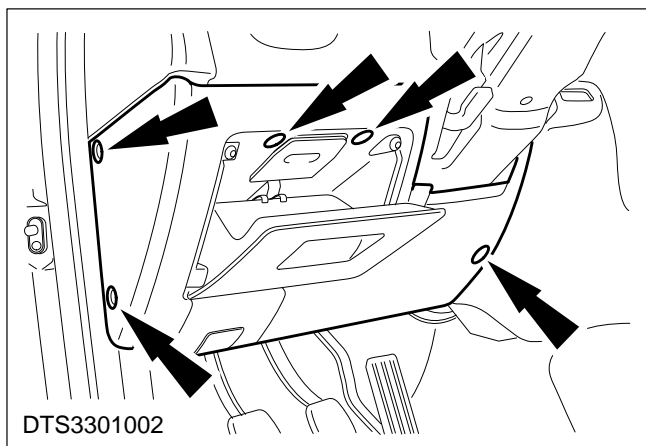


Remove

**⚠ CAUTION:** Disconnect the battery negative lead.

1. Remove the driver's side lower crash pad/facia panel (five screws).

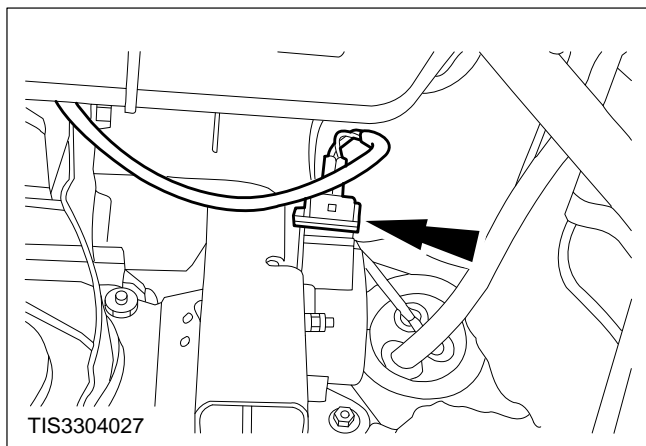


2. Disconnect the multiplug.

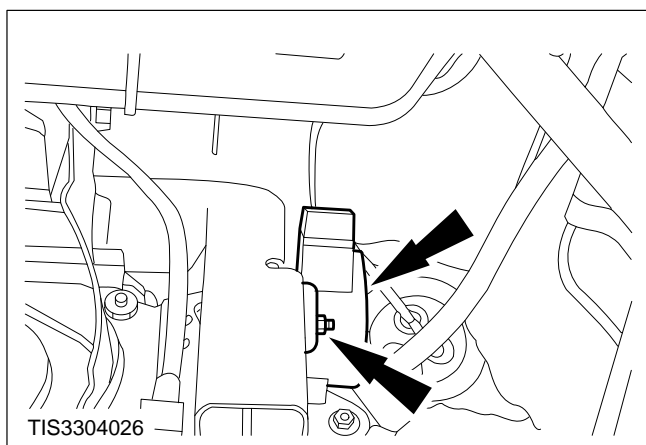

3. Remove the sensor (two nuts).

## Install

 **CAUTION:** When installing the sensor, ensure it is fitted the correct way up and the accelerator pedal drive tang is engaged.

**4. Refit the components in reverse order.**