

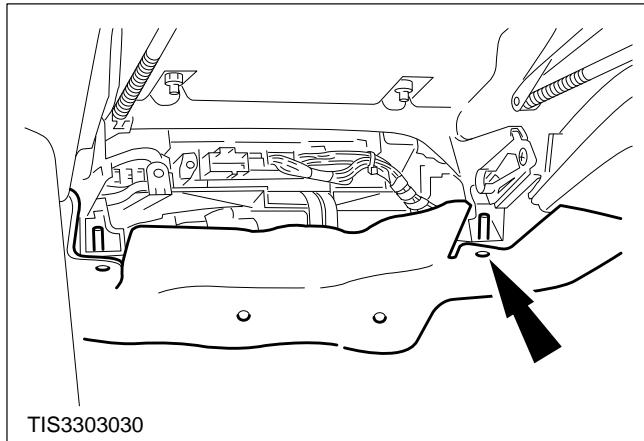
## Module – Immobiliser (PATS) – Remove and Install (33 660 0)

Remove

 **CAUTION:** Disconnect the battery negative lead.


1. Remove the glove compartment (refer to Operation Number 43 668 0).

2. Remove the carpet trim.








3. Detach the powertrain control module.

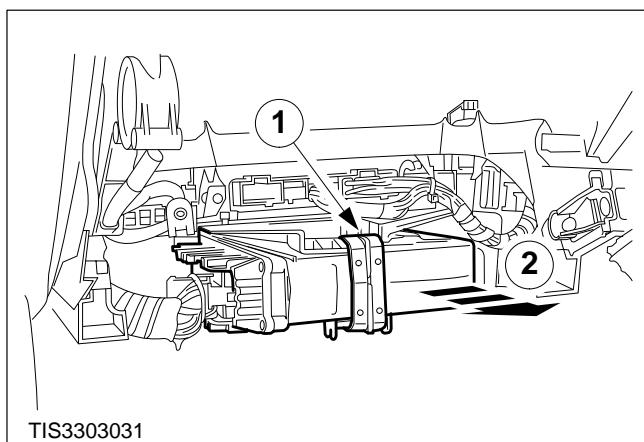- 1 Unclip the module.
- 2 Detach the module.



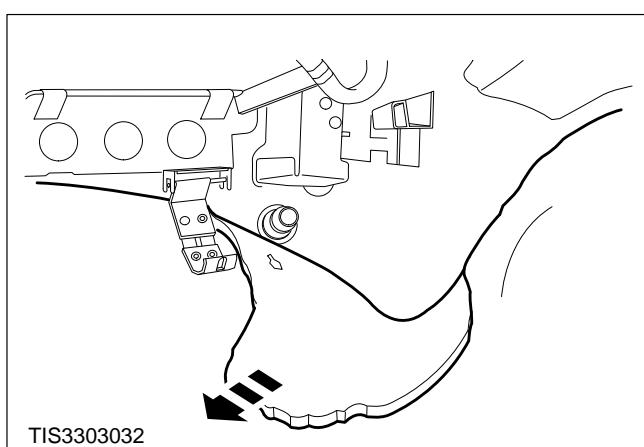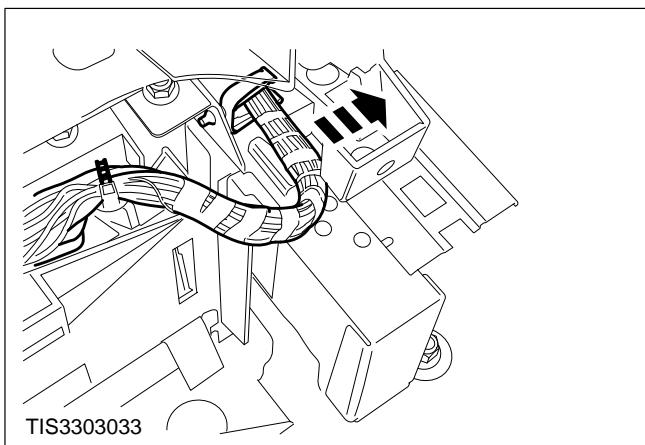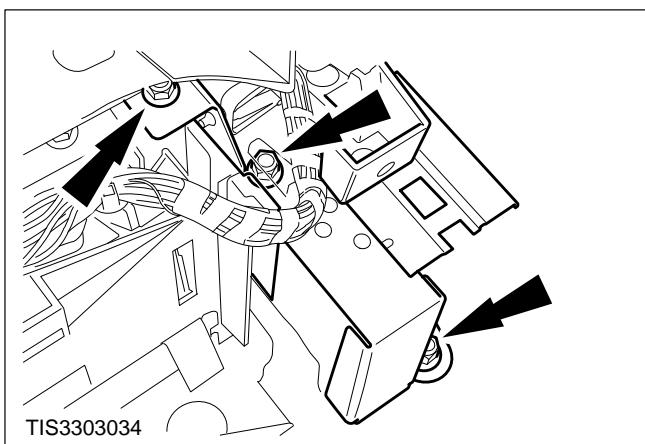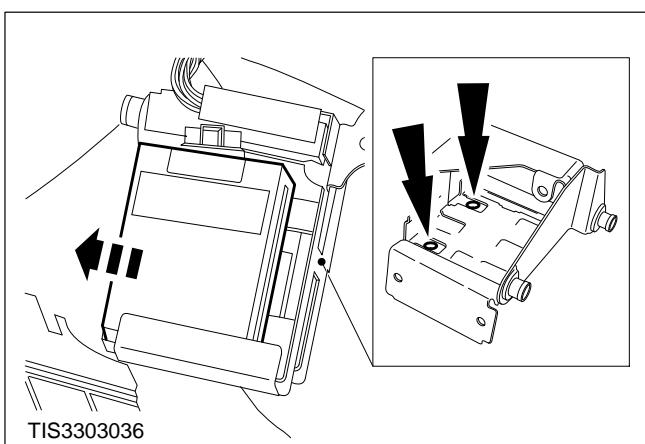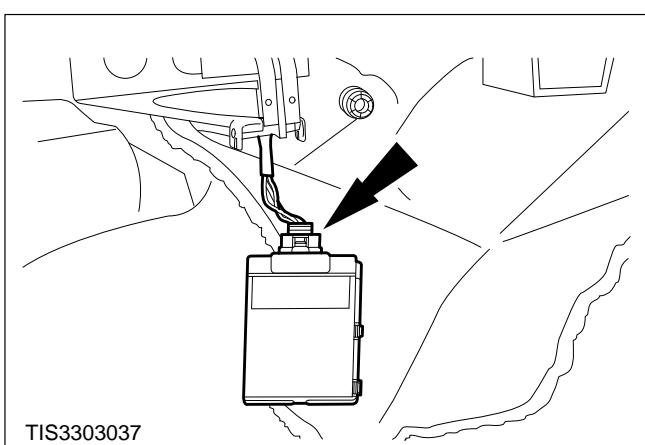4. Detach the floor covering.



**5. Detach the wiring harness.****6. Detach the bracket (three nuts).****7. Detach the PATS module.****8. Disconnect the multiplug and remove the PATS module.**

## Install

**NOTE:** FDS 2000 must be used to configure a new PATS module on VM diesel variants. To carry out this procedure, run the Configure menu item from the main menu.

**9. Refit the components in reverse order.**